 



How to Dub VHS → DVD

You will need the remote control from the desk.

1. Turn on DVD/VHS deck and press the VCR/DVD button until the light under "VCR" is lit.

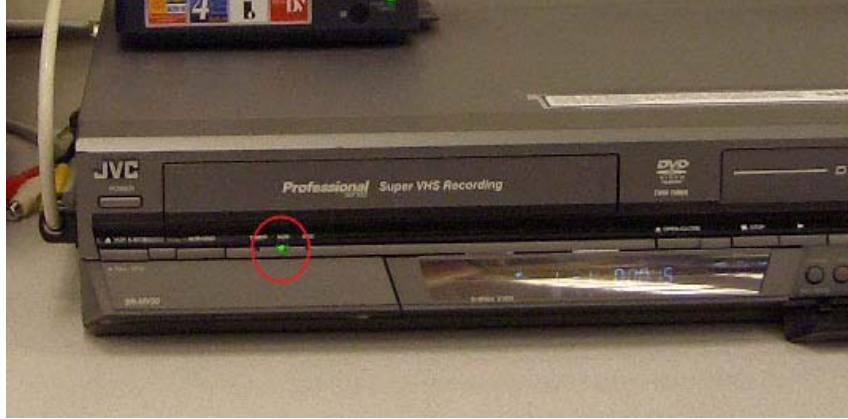

 2. On the remote, press "set up" to access the main menu screen, then use the arrow buttons to select "Copy Set" and press enter.

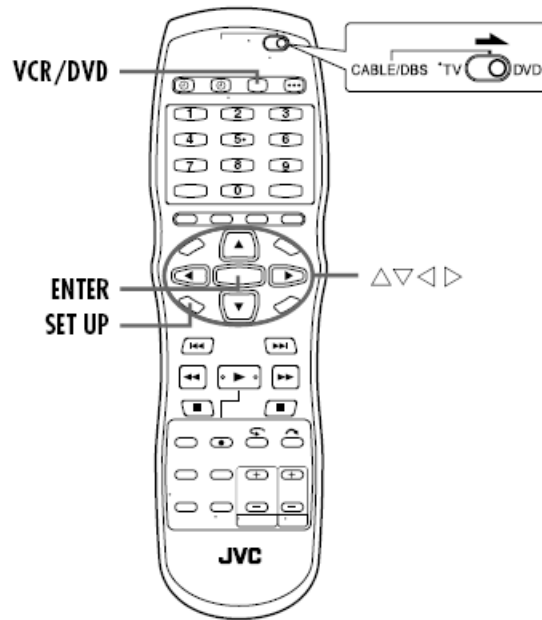

3. Press the arrow buttons on the remote to select "Full Disc" from the menu and press enter to select "off".
4. Press "Set Up" on the remote to complete the setting.

5. Insert the tape you'd like to dub in the VCR, and a blank DVD in the DVD recorder. Press VCR/DVD button on the deck until the light is under "DVD."



6. Press the Record Mode button to change the record mode to ensure that your tape can fit on the DVD. (XP = 1 hour; SP = 2 hours; LP = 4 hours; EP = 6 hours)



7. Press "VCR→" button to select the dubbing direction.



 
8. Press and hold the "dubbing" button for more than two seconds to start dubbing.




9. You will have to press the stop button once the tape is done.



10. Before you can view the DVD on a different DVD player, you must finalize the DVD. Using the remote, press the "Set Up" button.

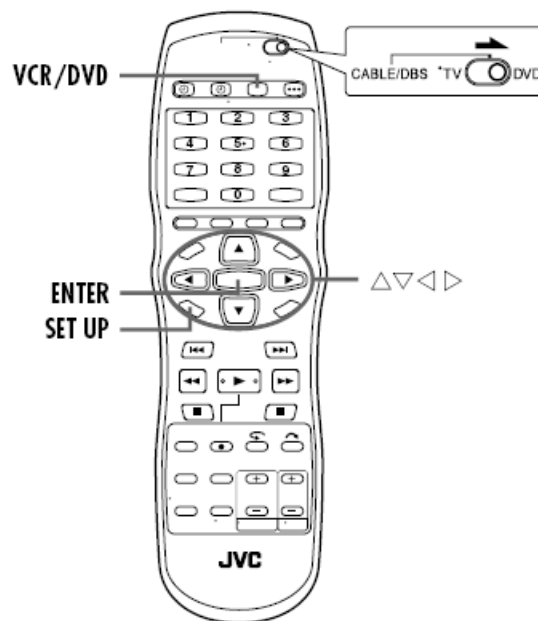

 11. Use the arrow buttons on the remote to select "DVD Set Up" → Utility. Then select Finalize. Choose "yes" when the dialog box comes up, then OK when it warns that the disk will be read-only. It will take around 10 minutes to finalize the DVD. After it is finalized, you can view it on regular DVD players.

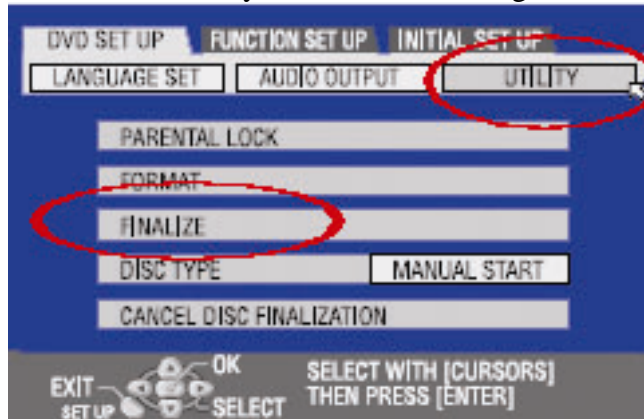

Created July 13, 2007 - DK