

How to get images off the Cameras

There are several ways to get images off of a digital camera, whether it belongs to the library or a patron.

Digital Learning Cameras for checkout

Casio



This camera is plug and play with a Mac or PC. Use the USB cord that comes with the camera to connect it to the computer. There is a small USB port on the camera, on the side opposite where the wrist strap is at. You will need to lift up the small grey plug covering it and move it to the side. Plug the small end of the cord into the port on the side of the camera, and the large end to the USB port on the computer. Turn on the camera, and it will automatically install the needed drivers and connect to the computer. If the option to open the file containing the pictures does not come up, then you will need to click on the My Computer icon on the desktop, then choose the Casio (it may be called a removable disk instead of Casio).

Digital Rebel



This camera requires drivers to be installed in order to get the images off the camera through the USB cable. Since the student needs to use their own CF card, you can use the Media Card reader instead. Plug the media card reader's USB cord into the computer, and then insert the CF card connectors first into the CF port on the reader. If the option to open the folder where the pictures are at doesn't come up, then you will need to click on the My Computer on the desktop, then choose the Removable Disk.

Most other digital cameras

If the patron has brought in their own digital camera, they can either use the USB that came with their camera, or they can borrow one from the desk. If that doesn't work, you can have the student remove the media card, and use the Media Card Reader.

Created August 1, 2007 - DK